



856 INDUSTRIAL COMBINATION LOCKS



USER INSTRUCTIONS:

- **Password setting & locking:**
 - When lock is in "Open" position numbers shown are 0-0-0-0 (Code 0-0-0-0 is not for locking)
 - Set a new password by turning each dial i.e. 1-1-1-1
 - Turn knob to the left to "Lock" position
Caution: Knob must be turned all the way to the "Lock" position.
 - Lock is now locked and numbers automatically turn to 0-0-0-0
- **Unlocking**
 - When lock is in "Lock" position, numbers shown are 0-0-0-0
 - Turn each dial to the preset password i.e. 1-1-1-1
 - Turn knob to the right to "Open" position.
Caution: Knob must be turned all the way to the "Open" position.
 - Lock is now open and numbers automatically turn to 0-0-0-0
- **In case of forgotten password**
 - Insert the key and turn to Open position
 - Open the door, turn the key back to Close position and remove the key.
 - Press and hold a Code Recovery Button while turning the corresponding number dial in front until the dial stops.
Repeat the above steps until all 4 numbers have been recovered
 - Turn knob to Open position and the lock will automatically reset all the dials to 0-0-0-0. The lock can now be used as normal.